


掌上游戏机说明书

handheld game console

comprehensive instructions

使用前请认真阅读本手册
技术规格如有变更，恕不另行通知

(X9 二代 S 版本) (X9 三代 PLUS 版本)

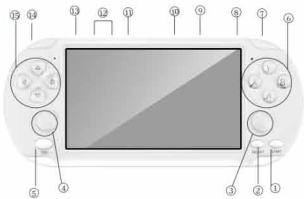

- 1.START 键(短按-游戏开始键)
- 2.投币键
- 3.同步键(6)
- 4.方向盘操作主方向
- 5.ESC 游戏退出键
6. B 键主页或者游戏(确定键)双击或者单击
A 键主页(退出键)双击或者单击
其它二个是功能键(以实物为准，版本不一样，操作也不一样)
- 7.R 键或者没功能(以实物为准，版本不一样，操作也不一样)
- 8.耳机接口 TV-UOT 接口
- 9.(开机键)(锁键)(充电请开锁键或者推到 ON)
10. TF 卡槽(最大支持 32G)
- 11.充电接口数据接口
- 12.+音量键
- 13.关机键 保存键 (长按-关机)
14. L 键 加币键 或者 没功能 (以实物为准，版本不一样，操作也不一样)
- 15.方向盘操作主方向

四种开机方法

- 1.(9) 锁键推到 ON 或者 推到左边 开机
- 2.锁键在 ON 或者在左边，按(13)开机键不放(3-5 秒) 开机
- 3.以操作不可以，请给机器充电(请把锁键推到 ON)
- 4.充电开机，说明索，没开锁键

游戏操作

- 1.普通游戏：(双击 B 键-按 START 开始键)
- 2.街机游戏：(双击 B 键-按投币(L 键或者 R 键)-在按 START 开始键)

使用前准备

- 键：左右键，短按在不同的选项间切换或调节数值；长按为快进或快退。
- 键：上下键，桌面菜单中上下选择使用与控制游戏人物上与下的方向使用。
- START 键 游戏开始确认/暂停键 ESC 游戏退出键
- 键：确认播放键：播放/暂停/停止状态间切换。菜单选择时，为确认键。
- ON/OFF：(锁键)电源开关

按键功能

<input type="radio"/>	B	确认键：进入游戏或启动控制人物出拳射击/跳，不同游戏功能不一样)
<input checked="" type="checkbox"/>	A	退出键：(控制人物出拳/射击/跳不同游戏功能不一样)
<input type="checkbox"/>	Y	游戏功能键：(控制人物出拳/射击/跳不同游戏功能不一样)
<input checked="" type="checkbox"/>	X	游戏功能键：(控制人物出拳/射击/跳不同游戏功能不一样)

由于支持多种格式的掌上游戏机，没有固定哪个按键对应那种操作，需要用户每个键都按一下进行测试 (游戏不一样，操作也不一样，需要用户去发现新大陆)

语言设置

出口街机加强版机器，(出口到 美国 欧洲 日本....) 默认是英文，如果开机看到的是英文菜单，请选择“setting—” language- 简体中文”，再按“B”键确认即可，语言设置好后，关机定要长按(13) 开机键关机

如何游戏存档

玩游戏时按(ESC 键)退出游戏，在菜单里选择“保存进度”，按 O 键确定，最多可以保存 6 个游戏进度。

如果你想接着上次的游戏进度玩，进入游戏后，选择“载入进度”就可以。

基本功能

- 1、 游戏支持 8 位 16 位 32 位 64 位 128 位街机游戏....
- 2、 4.3 英寸 TFT 护眼彩色显示屏 (以实物为准)
- 5.1 英寸 TFT 护眼彩色显示屏 (以实物为准)

- 3、 音乐播放：支持 WMA、OGG、MP3、APE、FLAC、 WAV、AAC 格式播放。
- 4、视频播放支持：支持 720P 高清电影支持 AVI、WM FLV、RM、RMVE、MP4、3GP、 MPEG、VOB、 等格式视频播放
- 5、 录音支持：支持 FM MIC 录音(格式 MP3 WAV)
- 6、 图片浏览支持：支持 JPEG、 BMP、 GIF 格式浏览
- 7、 支持 TXT 电子书阅读。
- 8、 支持拍照、摄像、 PC Camera
- 9、 工具支持:支持 MP3 音乐 MP4 电影秒表、功能....
- 10、 外接设备:支持 TF 卡支持 TV-OUT
- 11、 设置功能:支持各功能属性的设置和提取。
- 12、 支持图片浏览和界面显示特效功能。
- 13、 支持 USB2.0 高速传输支持通过 USB 恢复或升级街机软件，
- 14、 支持多任务运行。支持文件导航功能
- 15、 格式 GBA NES BIN GBC GB SMD IMG SMC SFC ZIP (街机格式)(以纯英文或者日文语言为准，很多是国内玩家修改版本，不一定支持，)
- 16、 支持模拟器 PS1 GBA SFC MD/FC NES GB GBC CPS1 CPS2 GG(gba 格式) SMS(gba 格式)
- 17、 特别说明：游戏机内的已有文件夹不能删掉，否则机器不能运行。
- 18、 用户需要 AV 线 和 充电器 (请另外购买)(或者商家做活动免费配送)

电池低电

- 1.当电池出现低电后，游戏机会出现提示画面，然后自动关机进入睡眠状态，此时不要重新开机，请及时充电。
- 2.建议充电器电流规格选择 5V (500mA-1500mA) ， 请别用快充，和大于 2A 以充电器比如 500MAH 充电建议 3-4 小时，1A 充电器大概是(2-3 小时) 1.5A (1.5-2.5 小时)
- 3.插上充电器的时候，如果屏幕上有提示，选择“充电模式”。
- 4.充电时不建议玩游戏，否则会影响充电,如果出现拔掉充电器就关机的现象，把(锁键)推到 ON 位置， (以实物为准机型不一样，操作不一样，请看机型说明)

系统配置要求

操作系统： Windows 10/XP/2K/ME/98(需要安装驱动)/Linux9 及以上 /Mac OS 10 CPU：至少为 Pentium-133MHz 内存：至少 32MB、硬盘空闲空间：至少为 100MB

游戏删除 安装说明


- 1.如何游戏下载或删除。连上电脑后在“GMAE”文件中，能看到的游

- 戏都可以删除，但是固定在机器中的游戏在电脑上看不到，是删除不了。
- 2.如何下载游戏？用户可以在网上搜索游戏，先把游戏下载到电脑，再用 USB 线把游戏机连上电脑把下载好的游戏从电脑上复制到游戏机中的“GAME”文件夹 (游戏文件后缀名：gba/ gbc/ gb/ sfc/ nes，由于各个网站下载的游戏文件可能不同，有时会出现不支持的情况，请删掉再在其他网站下载。
- 3.如何查找下载好游戏(“游戏”或是“浏览器”图标，选择外置游戏)
- 4.由于游戏很多，可能会影响游戏机运行速度，建议用户把游戏机连上电脑，保留自己喜欢游戏，其他不喜欢的游戏可以删掉。也可在“GAME” 文件中建立一个“我喜欢”文件夹，把自己喜欢的游戏放在里面，方便下次查找。
- 5.提示下载好游戏拔开数据线 -- 界面会加载游戏 -- 游戏越多加载越慢 -- 加载好游戏一定需要按保存键关机，以后开机就不会重新加载游戏，

疑难解答

- 1.游戏机不能开机
请检查电池是否电量耗尽，可连接 USB 或充电器充电后尝试再次开机
- 2.耳机内听不到声音
请检查音量是否设置为 0
请检查耳机是否正确插入插孔
- 3./严重的噪音
请检查耳机的插头是否干净，污物可导致噪声
请检查音乐文件是否损坏，可尝试播放其他音乐来确定，如果文件已被损坏，可能导致产生很严重的噪音或跳音
- 4.屏幕显示乱码
请检查是否已设置正确的语言选项
- 5.不能下载文件
请确认计算机与游戏机间是否正确连接
请确认内部存储器的存储空间是否已满
请确认 USB 连接线是否有损坏。
- 6.接口与按键功能
ON—OFF： 电源开关
TV—OUT： AV 输出接口
USB 接口： 充电/数据接口
耳机图标： 耳机接口
TF： TF 内存卡扩展槽

(X9 Second Generation S Version) (X9 3rd Generation PLUS Version)

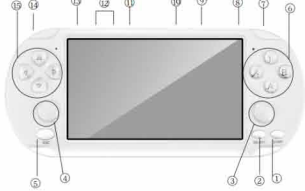

1. START (Short Press - Game Start)
2. Plus currency key or no function
3. Sec six
4. Main direction of steering wheel operation
5. ESC game exit key
6. B key home page or game (confirm key) double-click or click;
- A key home page (exit key) double-click or click
- The other two are function keys (depending on real object, versions are different and operations are different).
7. R key (depending on real object, versions are different, the operations are different)
8. Headphone Interface TV-UOT Interface
- 9.(Power key) (Lock key) (open lock key or push ON for charging)
10. TF Card slot (maximum support 32G)
11. Charging Interface Data Interface
- 12.+ - Volume key
13. Shutdown key save key (long press-shutdown)
14. L key plus currency key or no function (depending on real object, versions are different, the operations are different)
15. Main direction of steering wheel operation

Four Boot-Up Methods

1. (9) The lock key is pushed to ON or left to boot.
2. Lock key is on or on the left, press (13) power key (3-5 seconds) to start

up.

3. No operation, please charge the machine (push the lock key to ON)
4. Charge the power on to show that the lock key is not opened.

Game operation

1. Ordinary games: (Double-click B - press START to start)
2. Arcade Game: (Double-click the B key - press currency key (L key or R key) - press the START key)

Pre-use preparation

Key: Right and left key, short press to switch or adjust the value between different options: long press for fast forward or fast backward.

Key: In the desktop menu, select up and down to use and control the direction of the game characters up and down.

Up and down keys, the desktop menu up and down to choose the use and control of the game characters up and down direction to use.

START key game start confirmation / pause key ESC game exit key

Key: Confirm Play Key: Switch between play / pause/ stop states. Menu selection is for confirm key.

ON/OFF: (lock key) power switch

Key function

<input type="radio"/>	B	Confirm key: Enter the game or start the control character punch shooting/jumping, different game functions are different)
<input checked="" type="checkbox"/>	A	Exit key: (Control the character to punch shooting/jump. Different game functions are different)
<input type="checkbox"/>	Y	Game Function Key: (Control the character to punch shooting/jump. Different game functions are different)
<input checked="" type="checkbox"/>	X	Game Function Key: (Control the character to punch shooting/jump. Different game functions are different)

Because of the support of multi-format handheld games, there is no fixed key corresponding to that kind of operation, which requires users to press every key to test (games are different, operations are different, users need to discover the new continent)

Language Settings

Export Street Machine Enhanced Version Machine (Export to America, Europe, Japan....) Default is English. If you see the English menu on boot,

please select "Setting - "Language - Simplified Chinese" and press "B" to confirm. After setting the language, long press power key (13) to shut down.

How to archive games

When playing the game, press ESC to exit the game, select "save progress" in the menu, press O to confirm, and save up to six game progresses.

If you want to follow the previous game progress, after entering the game, choose "load progress" to do so.

Basic function

1. The game supports 8-bit 16-bit 32-bit 64-bit 128-bit arcade games.
2. 4.3-inch TFT eye-protection color display (depending on real object)
- 5.1-inch TFT eye- protection color display (depending on real object)
3. Music playback: support WMA, OGG, MP3, APE, FLAC, WAV, AAC format playback.
4. Video playback support: support 720P HD movie support AVI, WM FLV, RM, RMVE, MP4, 3GP, MPEG, VOB, and other formats video playback
5. Recording support: support FM MIC recording (format MP3 WAV)
6. Image browsing support: support JPEG, BMP, GIF format browsing
7. Support TXT e-book reading.
8. Supporting Photography, Camera, PC Camera
9. Tool support: support MP3 music MP4 movie stopwatch, function....
10. External Device: Support TF Card Support TV-OUT
11. Setting function: support the setting and extraction of functional properties.
12. Supports image browsing and interface display special effects.
13. Supporting high-speed transmission of USB2.0 to restore or upgrade the prototype software through USB.
14. Support multi-task operation. Supporting File Navigation Function
15. Format GBA NES BIN GBC GB SMD IMG SMC SFC ZIP (arcade format)
- (With pure English or Japanese language as the standard, many of them are revised versions of domestic players, which are not necessarily supported.)
16. Support simulator PS1 GBA SFC MD/FC NES GB GBC CPS1 CPS2 GG (gba format) SMS (gba format)
17. In particular: the existing folders in the game can't be deleted, otherwise

the machine can't run.

18. Users need AV wires and chargers (please buy them separately) (or free distribution of activities by businesses).

Low battery power

1. When the battery appears low power, the game appears a prompt screen, and then automatically shut down into sleep, at this time do not restart, please charge in time.
 2. It is recommended that the current specification of charger be 5V (500mA-1500mA). Please do not use fast charging. For chargers larger than 2A, such as 500MAH, it is recommended to charge for 3-4 hours. The charger of 1A is about 1.5A (1.5-2.5 hours).
 3. When plugging in the charger, if there is a prompt on the screen, choose "charging mode".
 4. It is not recommended to play games when charging, otherwise it will affect charging; if there is a phenomenon that the charger will be turned off, push (lock key) to ON position, (depending on real object, models are different, the operations are different)
- System Configuration Requirements
- Operating system: Windows 10/XP/2K/ME/98 (need to install driver)/Linux 9 and above/Mac OS 10 CPU: at least Pentium-133MHz. Memory: at least 32MB, hard disk free space: at least 100MB

Game Delete Installation Instructions

1. How to download or delete games. The games you can see can be deleted from the "GMAE" file after connecting to the computer, but the Games fixed in the machine can't be deleted because they can't be seen on the computer.
2. How to download the game? Users can search the game online, first download the game to the computer, and then use USB cline to connect the computer to copy the downloaded game from the computer to the "GAME" folder (game file suffix: GBA / GBC / GB / SFC / nes), because the downloaded game files may be downloaded from various websites. Different, sometimes there will be no support, please delete it and download it on other websites.
3. How to find and download games ("game" or "browser" icon, select external games)

4. Because there are many games, which may affect the speed of the game, it is suggested that users connect the game to the computer and retain their favorite games. Other games that they do not like can be deleted. You can also create an "I like" folder in the "GAME" file to put your favorite games in it for the next search.
5. Tips to download a game and unplugging the data line-the interface will load the game-the more the game loads, the slower the game loads- load the game must press the save key to shut down, and the game will not reload later booting up.

Troubleshooting

1. Game consoles can't boot
Please check if the battery is out of power, connect to USB or charger, and turn on again after charging.
2. No sound can be heard in headphones
Please check if the volume is set to 0.
Please check if the headphone is inserted into the jack correctly.
3. Serious noise
Please check that the plug of the headphone is clean. Dirt can cause noise.
Please check if the music file is damaged and try to play other music to make sure that if the file is damaged, it may cause serious noise or skipping.
4. Screen display garbled code
Check that the correct language options have been set
5. Unable to download files
Make sure that the computer is properly connected to the game.
Make sure that the storage space of the internal memory is full
Make sure the USB connection is damaged.
6. Interface and key function
ON-OFF: Power Switch
TV-OUT: AV Output Interface
USB Interface: Charging/Data Interface
Headphone icon: headphone interface
TF: TF memory card expansion slot